


DEUTER KID COMFORT –
NEW SAFETY FEATURE

LOCKING FOLD OUT STAND

Prevents unintended collapsing of the stand
when setting down or through child movement.

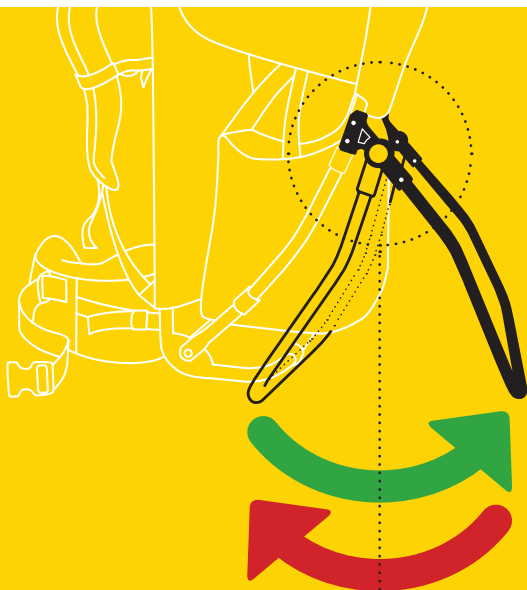

FOLD OUT

The stand folds out very easily by hand or foot. When fully extended the stand locks automatically (click).

FOLD IN

Before folding the stand in, it must be unlocked by pressing the yellow button on the left side. Fold the stand in by hand. **FAILURE TO UNLOCK THE STAND FIRST, CAN LEAD TO PERMANENT DAMAGE TO THE HINGE.**

